

MEDMAK

LXZ-50 LXZ-75 LXZ-100



www.medmak.com



MEDMAK

LXZ-50

LXZ-75

LXZ-100

Single swab transfer unit

The single swab transfer unit is an auxiliary attachment to the swab folding machine, which allows the feeding of single swabs to a specially adapted packing machine. The intervals between swabs can be adjusted, and the number of swabs per package can be pre-selected from 1 to max. 5 pieces.



Operating mode / functionality

After the last folding operation the swabs are pressed through the piling finger to the two bottom conveyor belts of the single-swab transfer station and held at the middle column (Fig. 1/2) by vacuum support.

By means of a cam-controlled lever (Fig. 1/3) the top conveyor belts (Fig. 1/4) are placed on the swabs which are then jogged to the packing machine.

The cycle operation of the conveyor belts (Fig. 1/4) is effected by a geared motor. The counting pulse depends on the number of swabs per package and controls the frequency-regulated gear which drives the conveyor belt.



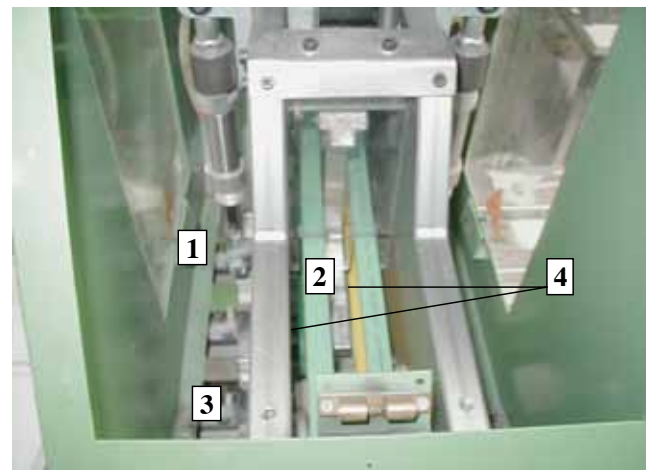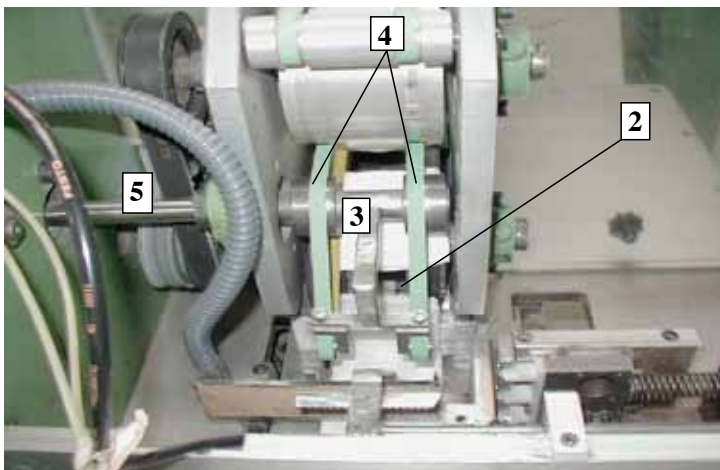

The lever (Fig.1/3) is controlled by the cam roller lever (Fig. 1/5).
If the swabs are above the belt feeding the packing machine the flaps (Fig. 2/1) open pneumatically and the die (Fig. 2/2) places the swabs on the conveyor belt of the packing machine (Fig. 2/3).
The electric coupling of the packing machine is carried out at the connector block in the switch cabinet of the swab folding machine

